


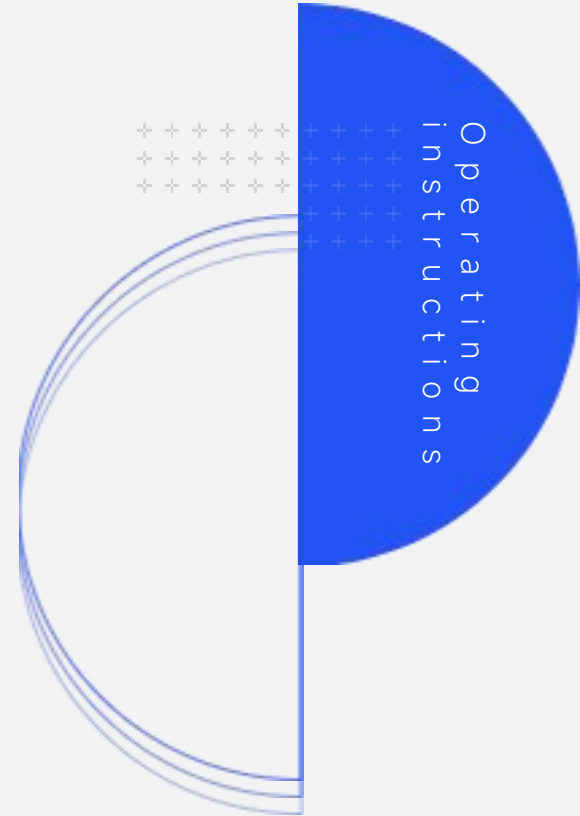

# Eaglerise NFC Reader Program

---



🕒 Update date: 2022.07.20



# Connect NFC programmer to computer



Computer/Windows 10



USB to Type B Cable




NFC Reader


*\*FEIG program must be installed before using.  
[Download link.](#)*




# Open Software

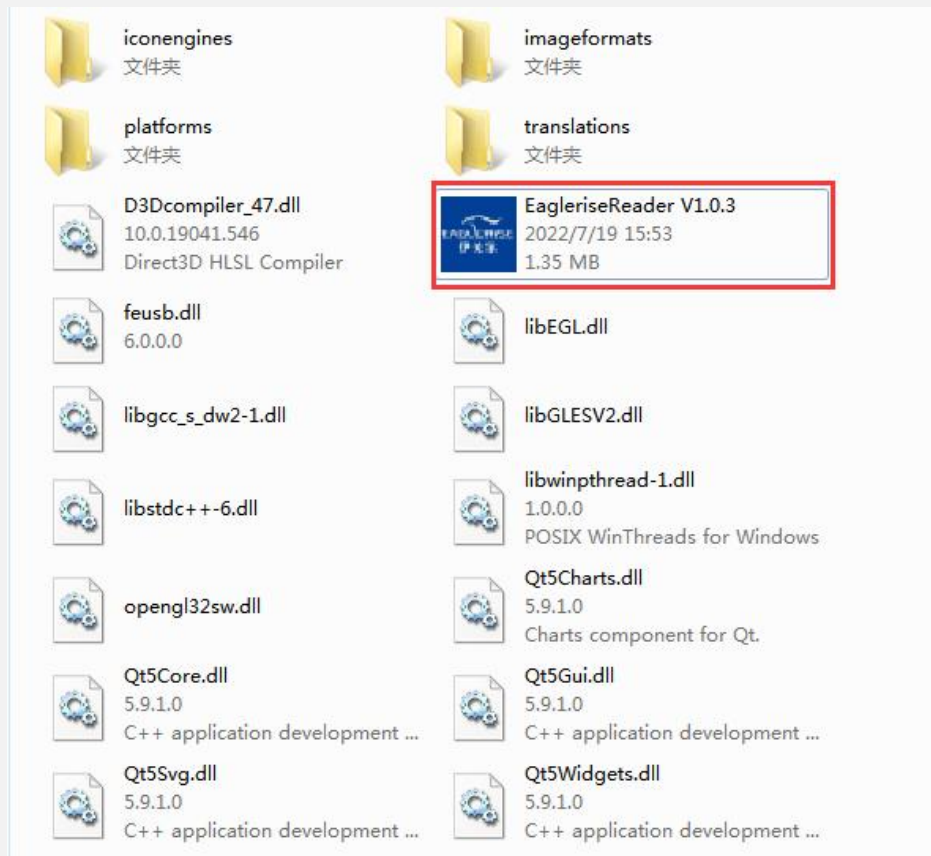

- ◆ Download Eaglerise Reader
- ◆ Click Eaglerise Reader to open

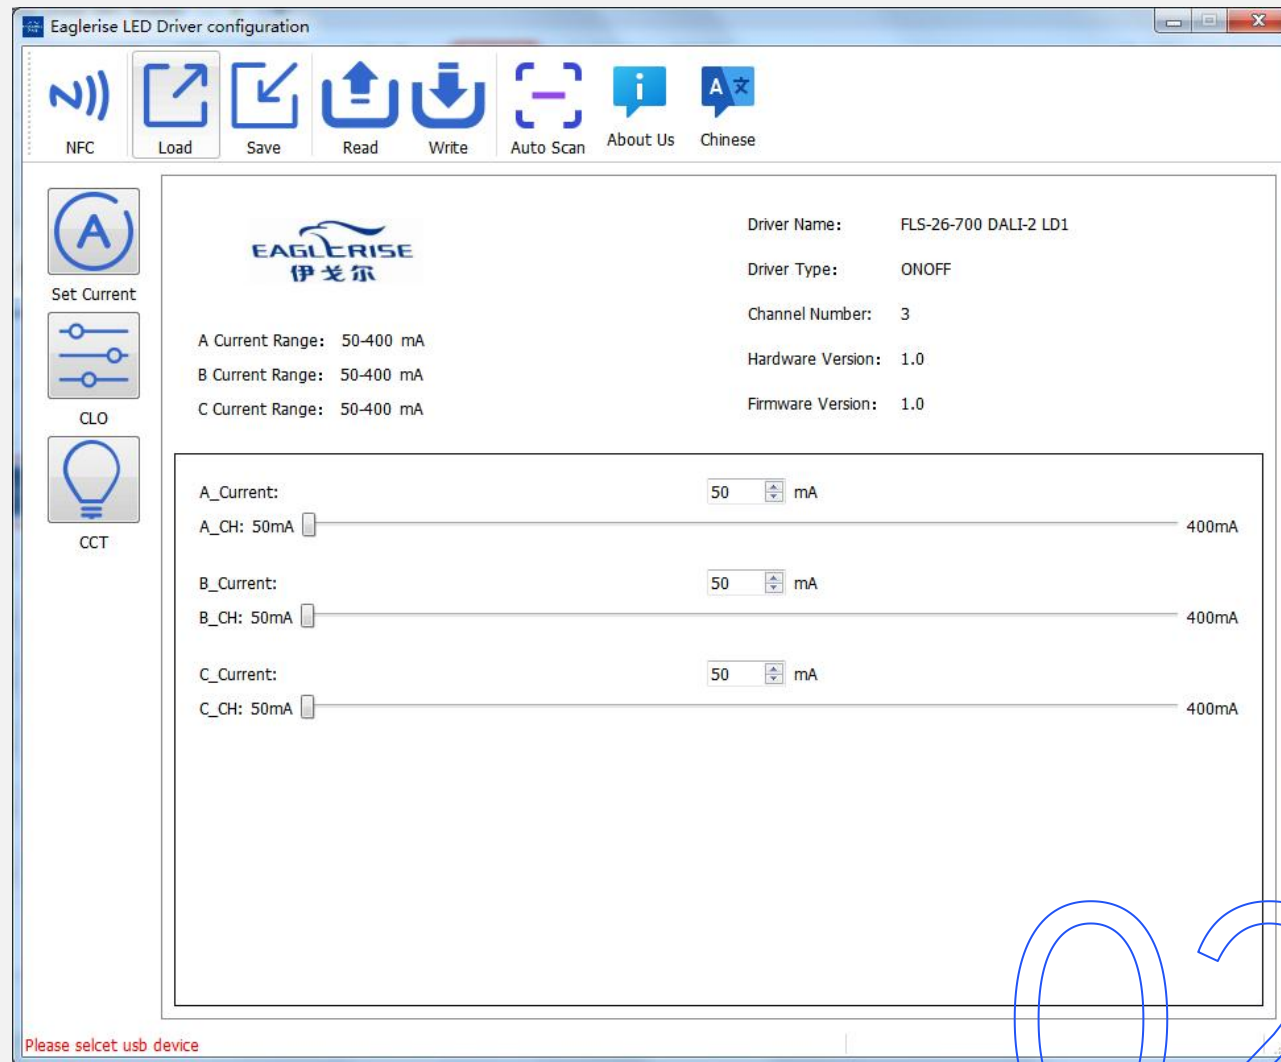


# Read LED Driver

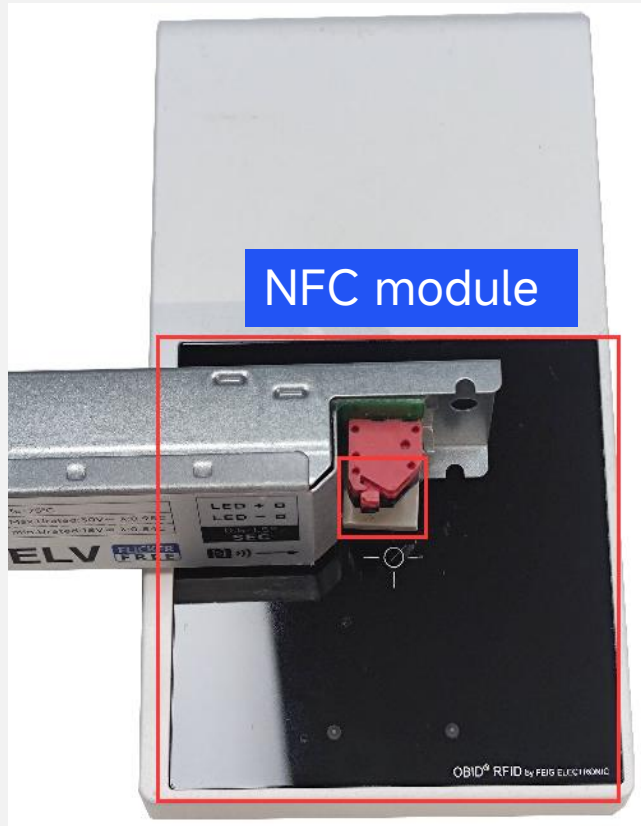

NFC module


NFC detective area

- ◆ Step 1 Put LED driver on the NFC reader
- ◆ Step 2 Click Read button to read LED driver

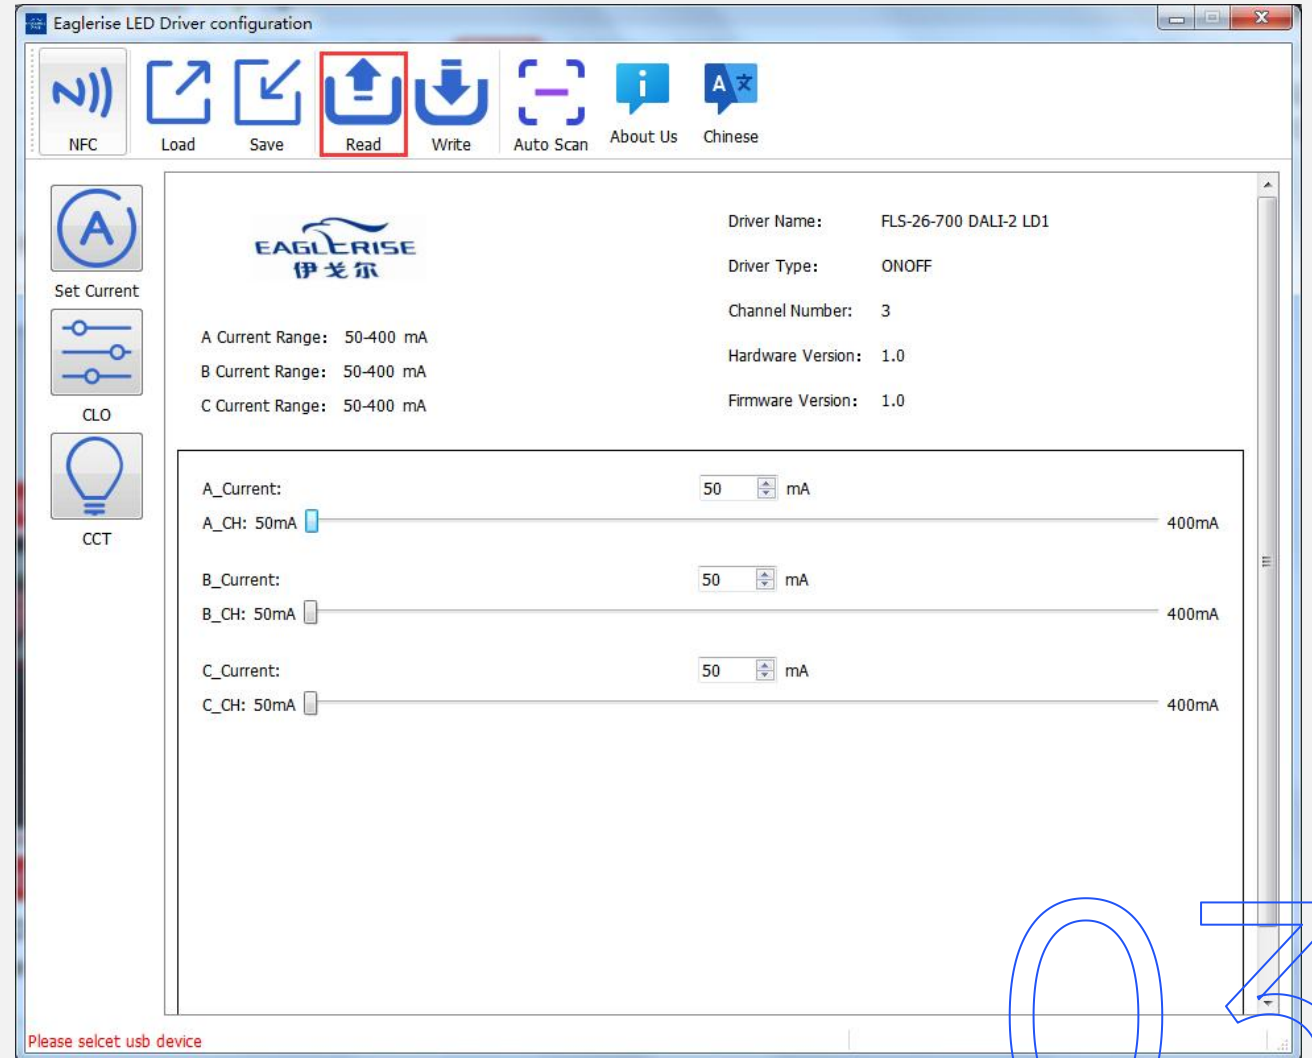

03

# Set Current

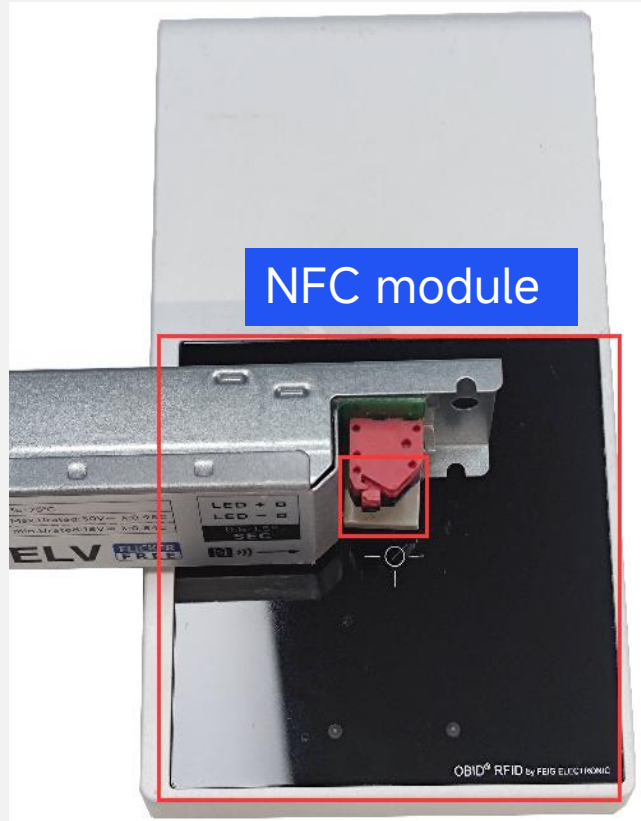


NFC module

NFC detective area

- ◆ Step 1 Set current as request
- ◆ Step 2 Click Write button to set current

\*Do not remove LED driver from NFC reader when setting

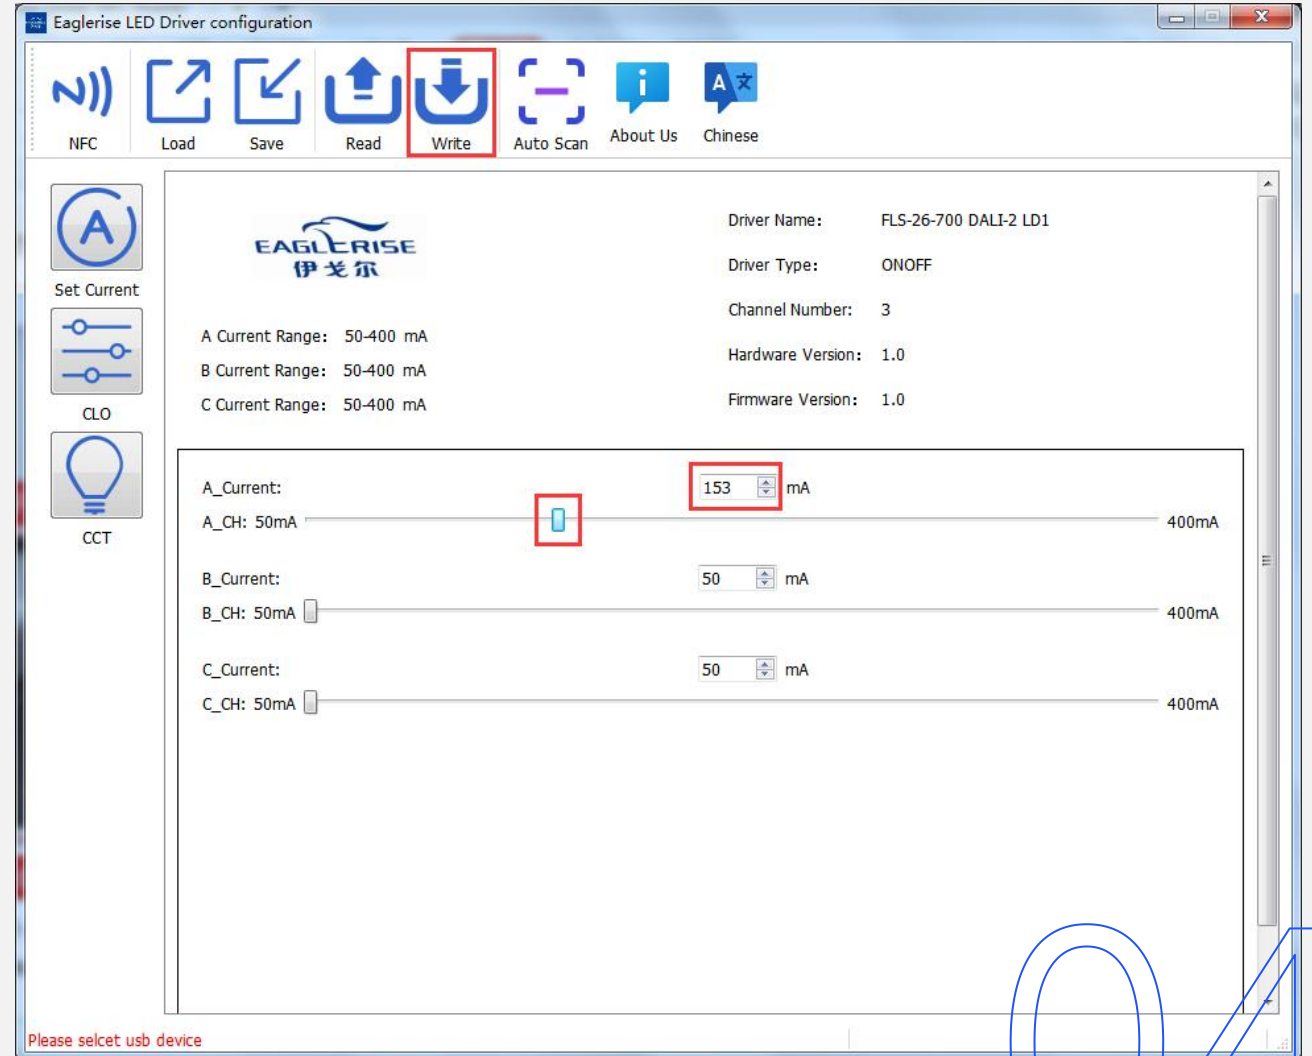

04




# CLO Mode



- ◆ Step 1 Click CLO menu
- ◆ Step 2 Enable Constant lumen output

Time(kh)	0	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75
Level(%)	90	91	92	92	93	94	95	96	97	98	99	100	100	100	100	100

Please select usb device

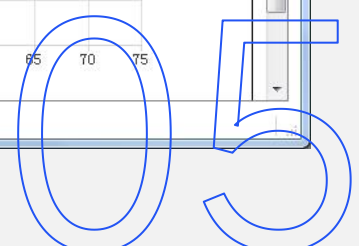

# Thanks for your attention!

---



Email  
[sales@eaglerise.com](mailto:sales@eaglerise.com)



Website  
<https://lighting.eaglerise.com>

